

COCKPIT SAFETY INSPECTION

MAINTAINANCE STATUS	CHECKED
COCKPIT EMERGENCY EQUIPMENT	CHECKED
OVERHEAD PANEL	CHECKED
HYDRAULIC PANEL	PUMP 3A OFF
PASSENGER OXYGEN PANEL	CHECKED
ELT	ARM
LANDING GEAR LEVER	DOWN
START/STOP SELECTORS	STOP
SPEED BRAKE LEVER	CLOSED
FLAP LEVER	VERIFY POSITION
RAT MANUAL DEPLOY	STOWED
CIRCUIT BREAKERS	CHECKED

POWER UP

BATTERY 1	ON
BATTERY 2	AUTO
BATTERIES VOLTAGE	MIN. 25V
GPU BUTTON	AS REQUIRED
FIRE EXTINGUISHER PANEL	CHECKED
APU	AS REQUIRED
EMERGENCY LIGHTS	ARMED
NAV LIGHTS	ON
ELECTRONIC CIRCUIT BREAKERS	CHECKED
DVDR PANEL	CHECKED

PREFLIGHT

PRESSURISATION PANEL	SET
OXYGEN MASKS	CHECKED
FLIGHT INSTRUMENTS	SET/CHECKED
THRUST LEVERS	IDLE
PARKING BRAKE	ON
ACARS	SET

BEFORE START

TRIM PANEL	SET
MCDU	CHECKED/SET
FUEL QUANTITY	___ CHECKED
TAXI AND TAKEOFF BRIEFING	COMPLETED
DOORS AND WINDOWS	CLOSED
TRANSPONDER	TA/RA
FLIGHT DECK DOOR	LOCKED
PASSENGER SIGNS	ON
BEACON	ON
HYDRAULIC PUMP 3A	ON
STEERING	OFF

AFTER START

FLAPS	___ SET
FLIGHT CONTROLS	CHECKED
EICAS	CHECKED
DISPATCH CLEARANCE	CHECKED

BEFORE TAKEOFF

TAKEOFF CONFIGURATION	CHECKED
BRAKES TEMPERATURE	CHECKED
EICAS	CHECKED

AFTER TAKEOFF

FLAPS	ZERO
LANDING GEAR	UP
PRESSURISATION	CHECKED

DESCENT

AUTOBRAKE	___ SET
LANDING DATA	SET
APPROACH BRIEFING	COMPLETED

APPROACH

PASSENGER SIGNS	ON
ALTIMETERS	SET/CHECKED

BEFORE LANDING

LANDING GEAR	DOWN
FLAPS	___ SET

PARKING

PARKING BRAKE	ON
START/STOP SELECTORS	STOP
HYDRAULIC PUMP 3A	OFF
ACARS	SET

POWER DOWN

PASSENGER SIGNS	OFF
EMERGENCY LIGHTS	OFF
GPU/APU	OFF
BATTERIES 1 AND 2	OFF

EMERGENCY EVACUATION

AIRCRAFT PARKING	UPWIND
FLAPS	FULL
PARKING BRAKE	SET
ATC (VHF 1)	ADVISED
CABIN CREW (PA)	INFORMED
CABIN PRESSURE	VERIFY ZERO

If not zero, MODE SEL on MANUAL, VALVE OPEN

ENGINE START LEVERS	OFF
FIRE EXTINGUISHERS (ALL : ENG and APU)	PULL

■ **If Evacuation required :**

- EVACUATION INITIATE

■ **If Evacuation not required :**

- CABIN CREW and PASSENGERS (PA) NOTIFY